



German ANZ.3.9 Friction Fuze.

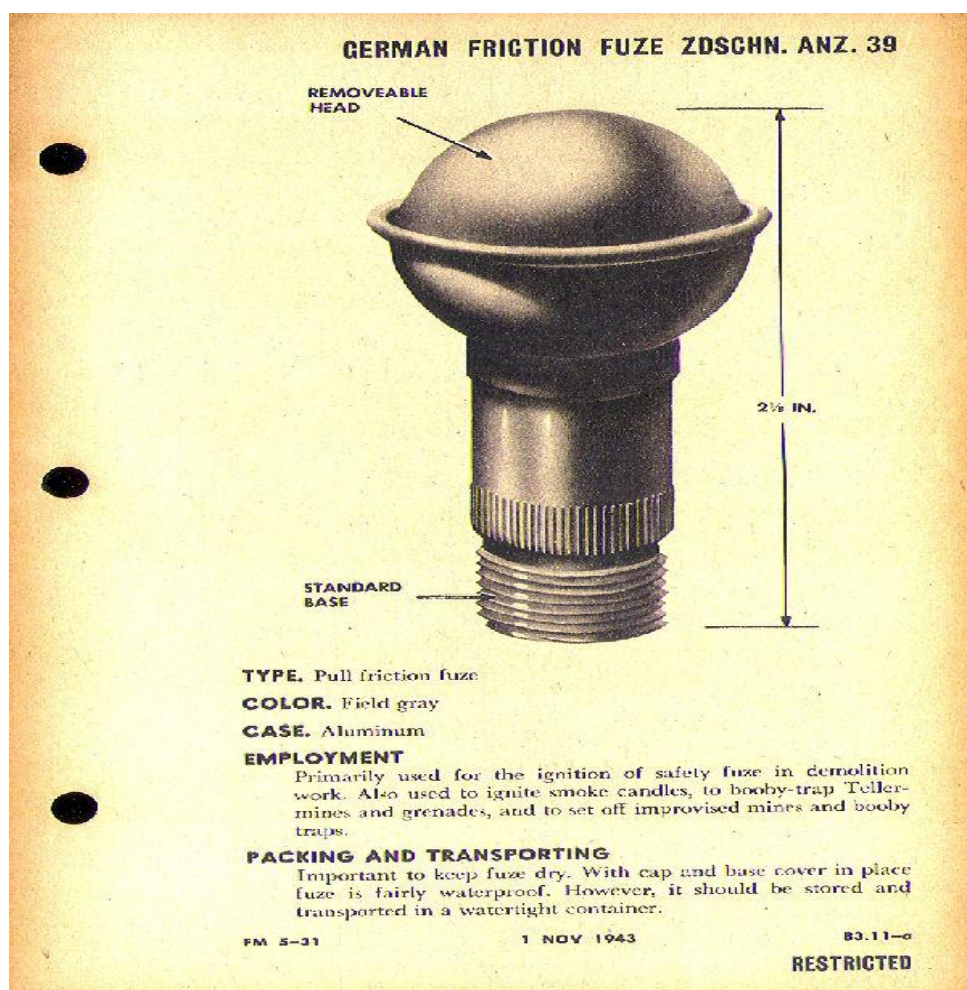

GERMAN FRICTION FUZE ZDSCHN. ANZ. 39

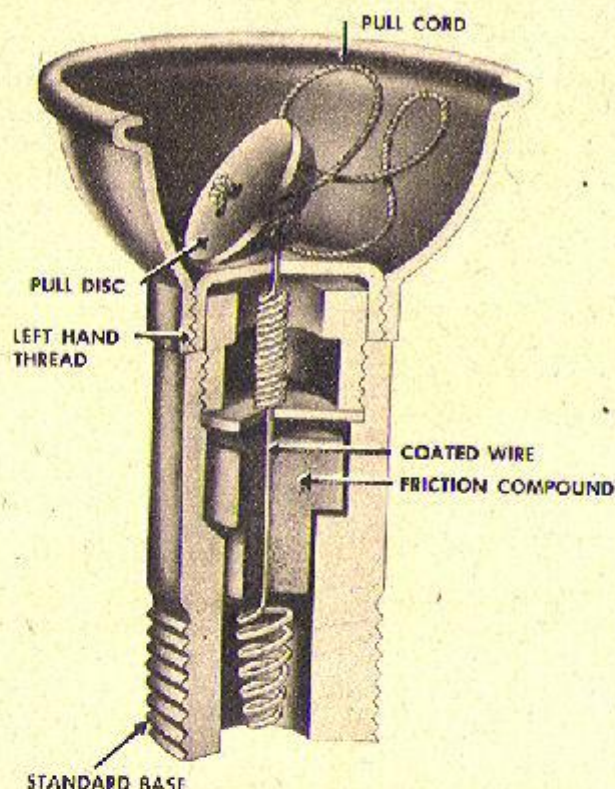

FUNCTIONING

WITH CAP REMOVED

1. A pull on pull disc and cord—
2. Draws the coated wire through the friction compound—
3. And ignites the friction compound, which shoots flame out the open end of the threaded base.

DISARMING

1. Unfasten pull cord from anything to which it might be attached.
2. Remove fuze and detonator from charge.
3. Detach detonator from fuze and replace cap if available.

INSTALLING AND ARMING

1. Attach German detonator to base of fuze, or wedge U. S. nonelectric cap into it.
2. Attach fuze to mine. Detonator must be inside.
3. Remove cap (left hand thread to distinguish from friction fuze B. Z. E.), attach trip wire, and conceal.

RE-USE

Examine for signs of water deterioration before using.