


German S.Mi.Z.35

Pressure Ignitor.

Used in S Mines.



GERMAN PRESSURE FUZE S. MI. Z. 35

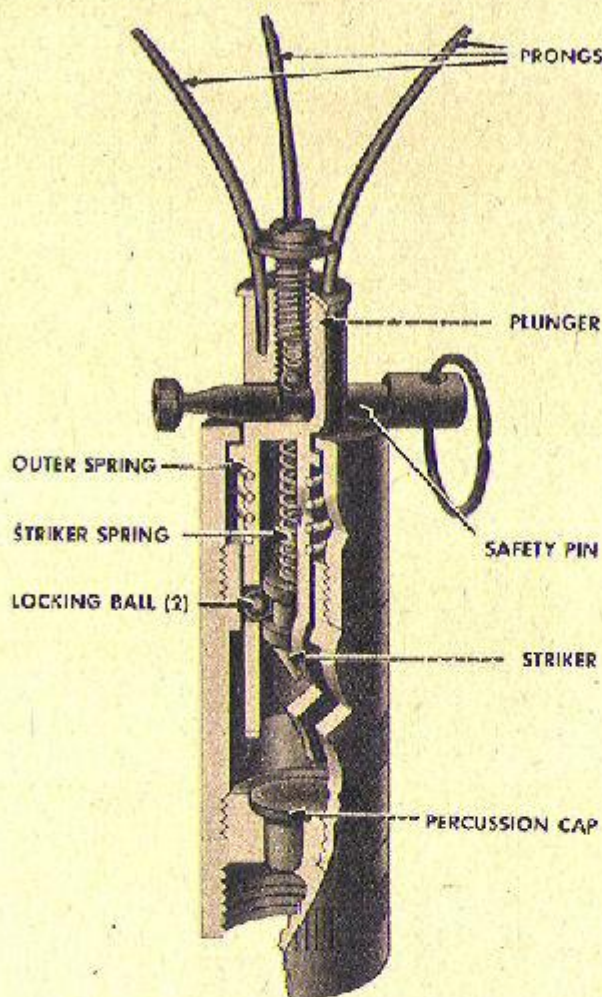

FUNCTIONING

1. With safety pin removed, 8-10 pounds pressure on prongs overcomes resistance in outer spring, and depresses plunger.
2. This permits two locking balls to be forced outward, releasing striker.
3. Released striker, driven by striker spring, explodes percussion cap.

DISARMING

Insert pin or wire in safety hole.

INSTALLING AND ARMING

1. Attach fuze to mine.
2. Install mine and camouflage.
3. Remove safety pin.